

APPLICATION NOTE: 194


Ekho Modules & Call Points

This document explains how the two Ekho Hybrid Wireless I/O Modules can be configured to operate with conventional call points. Whichever module is being used, the configuration is the same:

- At the EK-WL8-TRH (configuration, Radio, WL8-OUT, Edit and FLT) or via the Ekho config tool, change the input properties of the EK-WL8-OUT to FLT type = Fire
- At the control panel, change the MRC/SIO input action to Fire

Refer to the following two wiring diagrams.

EK-WL8-OUT Output Module

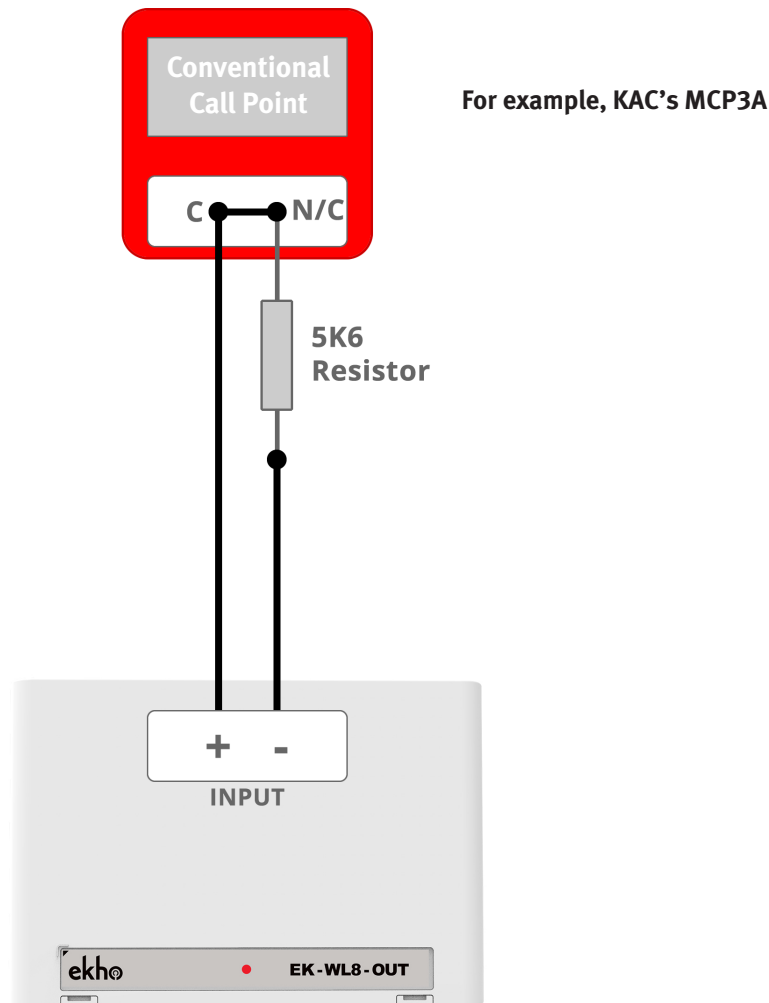

APPLICATION NOTE: 194

Ekho Modules & Call Points

EK-WL8-IN Input Module

